

Quick Start Guide




Locator Beacon

Locator Beacon

Locator Beacon is a compact Bluetooth signaling device that automatically transmits its location ID to MicroCELL® within Bluetooth range.


Getting to know your Locator Beacon

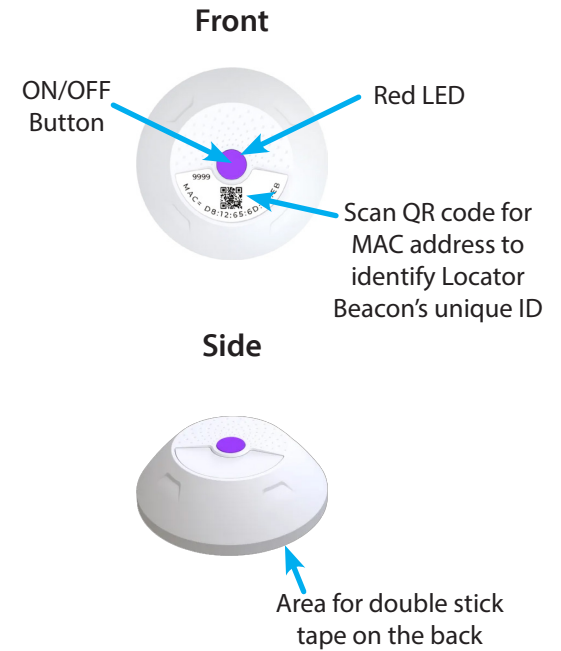

Power Locator Beacon ON and OFF


ON:

Press and hold the ON/OFF button for three seconds until the Red LED glows, then release.

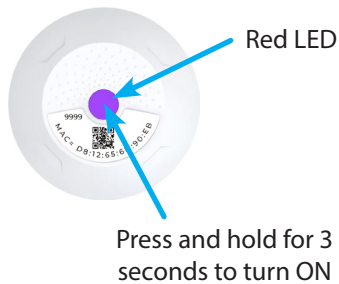

STATUS CHECK:

Press and release ON/OFF button for 1 second.
Red LED will glow, indicating Beacon is working properly.
If LED flashes twice: battery power is less than 10%.

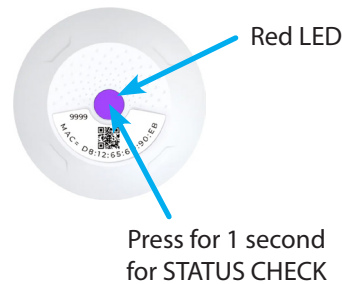


OFF:


To turn Locator Beacon OFF, press and hold the ON/OFF button for three seconds.



Getting to know your Locator Beacon

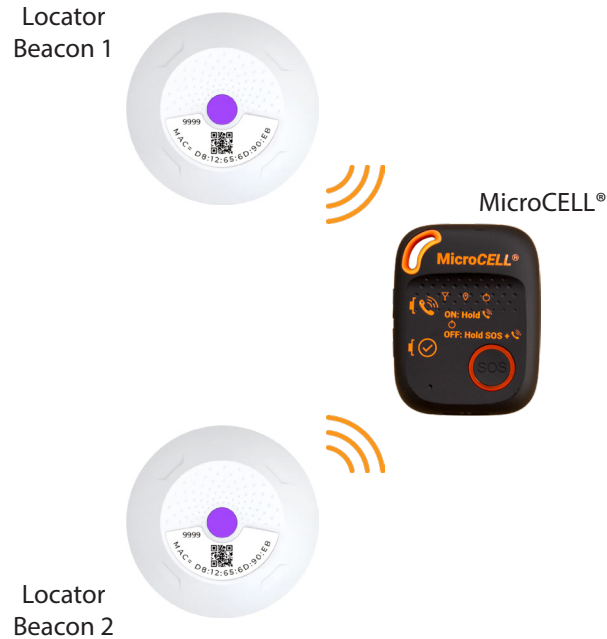

Locator Beacons provide indoor location information for room by room statistics.

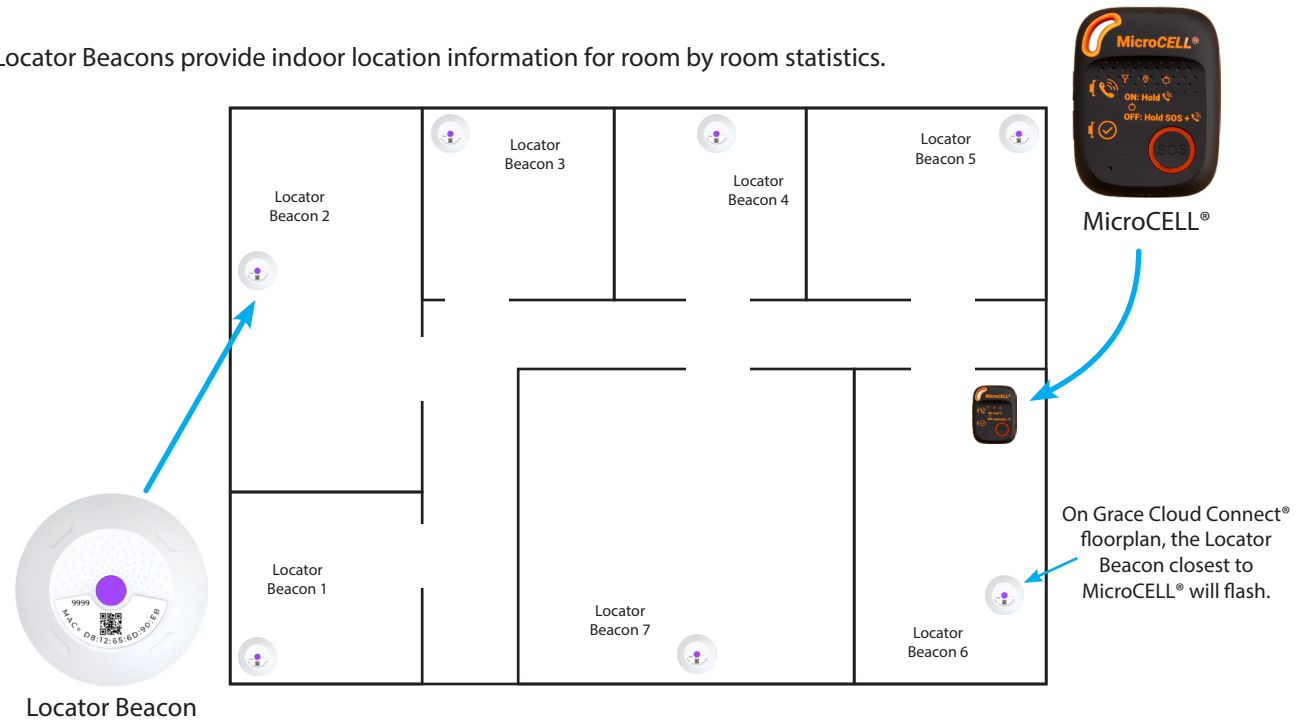

Features

- Battery operated, no wiring required
- Small and lightweight, easy to install
- Designed to be used with MicroCELL® Worker Worn Pendant
- Includes C2477 button battery, lasting up to 5 years
- Built-in temperature sensor measures the ambient environment temperature and sends data to Grace Cloud Connect® portal.

Specifications

BLE: BLE 5.0
Battery: C2477
Battery Run Time: Up to 5 years
Dimensions: 1.9 in. diameter x 0.6 in. deep
Certifications: IPX8 Rated
CPU/MCU: NRF52810

GRACE
INDUSTRIES, INC.

ph: 724-962-9231
305 Bend Hill Rd
Fredonia, PA 16124
www.GraceCloudConnect.com
www.GraceIndustries.com
sales@graceindustries.com